



DENVER®

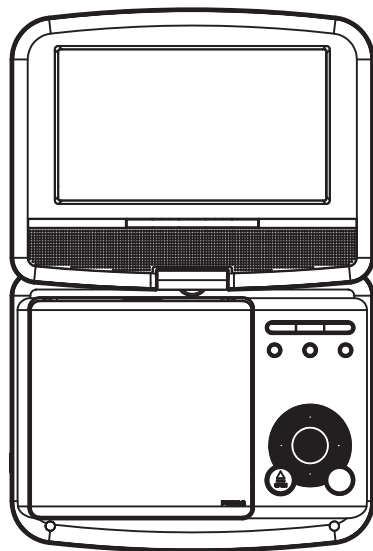

USER'S MANUAL MT-980DVBT

PORTABLE DVD

Before connecting, operating or adjusting this product,
please read this user's manual carefully and completely.
www.facebook.com/denverelectronics

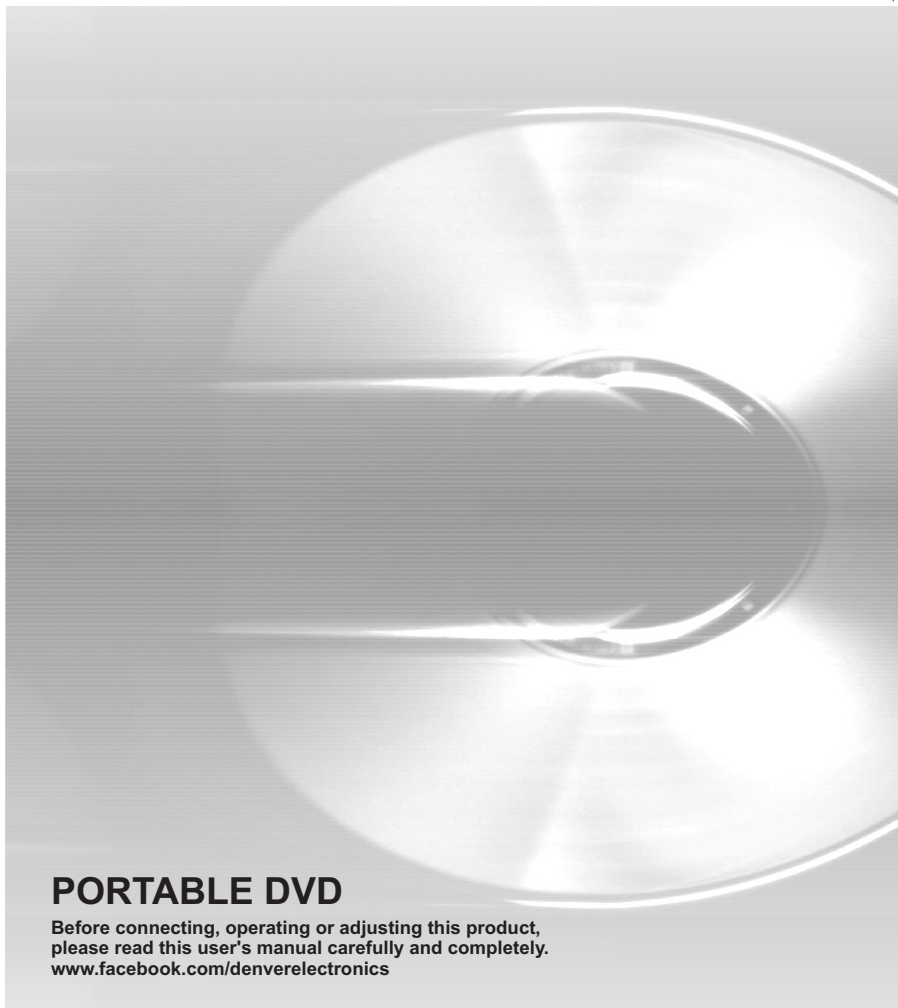

Important Safety Instructions



Warning: To reduce the risk of electric shock, do not remove the cover or back. There are no user-serviceable parts inside. Refer servicing to qualified personnel.



Warning: To prevent fire or electric shock hazard, do not expose the unit to rain or moisture.

- Do not expose the Adaptor and portable DVD to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- Keep the portable DVD away from direct sunlight and heat source such as radiators or stoves.
- Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your portable DVD on a cushion, sofa or other similar surface.
- Do not place the portable DVD on unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the LCD panel or frame.
- Only use the AC adapter included with portable DVD. Using any other adapter will void your warranty.
- The plug of AC adaptor is used as the disconnect device, the disconnect device shall remain readily operable.
- Unplug the power from the outlet when the unit is not in use.
- Attention should be drawn to the environmental aspects of battery disposal.



CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.



WARNING: Excessive sound pressure from earphones or headphones can cause hearing loss.



WARNING: Only use attachments/accessories specified provided by the manufacturer, the portable DVD is supplied by AC adapter, the AC adapter is used as disconnect device, the disconnect device shall remain readily operable.



Caution: Danger of explosion if battery is incorrectly replaced, replaced only with the same or equivalent type (Lithium battery)



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Safety Precautions

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN



Warning: This digital video disc player employs a laser system. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation Exposure.



Warning: To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open.



Warning: Never stare directly into the laser beam.



Caution: Do not install this product in a confined space such as a book case or similar unit.



Warning: when the unit using by child, parents must make sure **to let the child understand all contents in Instruction book how battery using** to guarantee using battery correctly all the time.



Warning: when find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.



Warning: do not charging battery on the place of insufficient ventilation such as: mattress, sofa, cushion , soft mat.....



Warning: we will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.





Warning: more than 250mm USB extension cord is prohibited to use for USB port

Notes on Copyrights:


- It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.
- This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
- SERIAL NUMBER:**
You can find the serial number on the back of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____
Serial No. _____
Date of Purchase _____

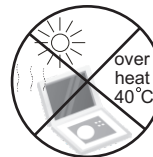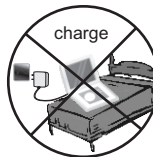

Identification of Controls


Main Unit

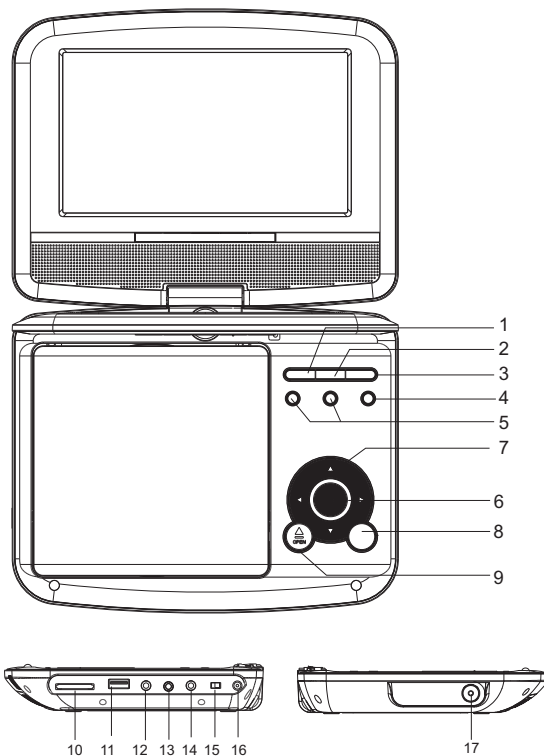

1. ►|| PLAY/PAUSE
2. ■ STOP
3. SOURCE
4. DVD/DVB
5. VOL- / VOL+
6. ENTER
7. ◀ / ◀◀ Left/Fast Backward
short press is left
long press is fast backward
▶ / ▶▶ Right/Fast Forward
short press is right
long press is fast forward
▲ / ▲▲ Up/Reverse Skip
short press is up
long press is reverse Skip
▼ / ▼▼ Down/Forward Skip
short press is down
long press is forward Skip
8. SETUP
9. OPEN
10. SD/MMC/MS
11. USB
12. AV OUT
13. 🎧 Earphone Socket
14. COAXIAL
15. ON/OFF
16. DC IN 9-12V
17. ANT.

Identification of Controls

Remote control unit

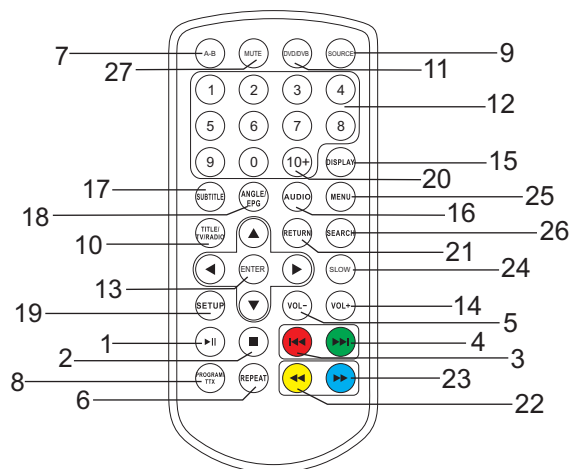

1.PLAY/PAUSE

Press PLAY/PAUSE once to pause playback, pressing PLAY/PAUSE second time will resume the playback.

2.STOP

When this button is pressed once, the unit records the stopped point, from where playback will resume if ENTER is pressed afterwards. But if STOP button is pressed again instead of ENTER button, there will be no resume function.

3.Reverse Skip

DVD: Go to previous chapter/ track to the beginning.
DVB: Red key in Teletext.

4.Forward Skip

DVD: Go to next chapter/ track.
DVB: Green key in Teletext.

5.VOL -

Adjust VOLUME.

6.REPEAT

Press REPEAT during playback to select a desired repeat mode.

DVD: you can play a chapter/title/all on a disc.

VCD/CD: you can play a track/all on a disc.

WMA: you can select Repeat one/Repeat folder play mode on a disc.

7.A B

To repeat a segment: press AB once to set the starting point for repeat segment, press it again to set an end point, and the player will repeat the segment from the start to the end point.

8.PROGRAM

DVD/VCD/CD: The program function enables you to store your favourite tracks from the disc. Press PROGRAM button, then PROGRAM MENU will appear on screen, now you can use the number key to directly input the titles, chapters or tracks number and select PLAY option. To resume normal playback, press PROGRAM and select CLEAR option on the program menu.

TTX: Teletext function DVB.

JPEG: You can press PROGRAM repeatedly to select the slide show mode, there are 16 types of slide show.

Identification of Controls

9. SOURCE

DISC/CARD/USB.

10. TITLE

DVD: Return to DVD title menu.

DVB: Switch to TV or Radio program.

11. DVD/DVB

Switch to DVD or DVB mode.

12. 0-9 NUMBER BUTTON

Selects numbered items in a menu.

13. ENTER

Confirms menu selection.

14. VOL +

Adjust VOLUME.

15. DISPLAY

To display the playtime and status information.

16. AUDIO

DVD/DVB: Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.

CD/VCD: Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, or Right).

17. SUBTITLE

Press SUBTITLE repeatedly during playback to hear a different subtitle languages.

18. ANGLE/EPG

Press ANGLE will change the view angle, on DVDs that support this feature.

DVB show EPG information.

19. SETUP

Accesses or removes setup menu.

20. 10+ BUTTON

In order to select a track 10 or greater, first press 10+, For example; select track 12, first press 10+, and then press number 2 button.

21. RETURN

Return to upper menu or close menu.

22. ◀◀ BUTTON

DVD: Press ◀◀ BUTTON allow skipping back at 5-level speed (X2->X4->X8->X20), press ENTER button return to normal playback.

DVB: YELLOW Key in Teletext.

23. ▶▶ BUTTON

DVD: Press ▶▶ BUTTON allow skipping ahead at 5-level speed (X2->X4->X8->X20), press ENTER button return to normal playback.

DVB: BLUE key in Teletext.

24. SLOW

Slow play.

25. MENU

Accesses menu on a DVD disc.

26. SEARCH

Goto time point , title or chapter you want in DVD Mode.


27. MUTE

Disable Audio output.

SETUP Menu Introduction

DVB SETUP MENU

System Config

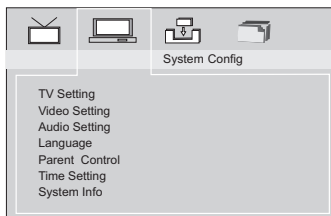

TV Setting: Selects TV system and TV type.

Video Setting: Change the video setting: brightness, contrast, hue, saturation.

Audio Setting: Selects coaxial digital out mode: OFF, RAW, PCM.


Language: Selects OSD language.

Parent Control: Change password and set channel lock. Default password is 0000.

Time Setting: Set time zone.

System Info: Informations about the update data, tuner, F/W version and model version.

Installation

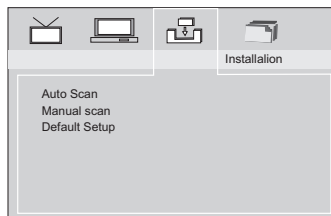


Auto Scan: Auto search all available channels.

Manual Scan: Manual search channels.

Default Setup: Reset DVB factory setting.

Game

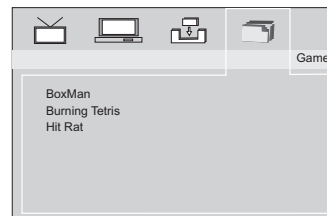

There are three games: BoxMan, Burning Tetris and Hit Rat. Select "ENTER" to play.

EPG (Electronic Program Guide)

The DVB-T player provides you an Electronic Program Guide to take a fast preview of live broadcasts from each TV channel in advance of watching it in full screen.

1. Press  <EPG>.

An Electronic Program Guide Menu appears on the screen, with a TV channel menu to the left and corresponding live broadcast of the selected program to the right.

2. Press "▶" button to more digital teletext provided by the selected channel.

Press "◀" button to return to program list.

3. Press "▲" button / "▼" button to toggle through each TV channel and to see its live broadcast.

* To exit from this page

---Press "EPG" button.

Digital Teletext

If the program you are watching broadcasts digital teletext, the DVB-T player can display teletext. The content of digital teletext varies according to the program provider. It could be pictures and sound for the program, pages of information on the programs, the weather, the news or other options.

Press TTX button, the teletext window appear on the screen.
Press **↑↓** button, turn over the teletext information.

* To exit from teletext

---Press TTX button to exit from teletext.

Battery Parameters

Battery Specifications:

Output: 7.4V

Charge / Discharge Time:

Standard charge time: 3h ~ 4h

Storage and work circumstances:

1. Storage circumstances	Temperature	Humidity
6 months	-20°C ~ +45°C	65±20%
1 week	-20°C ~ +65°C	65±20%
2. Work circumstances	Temperature	Humidity
Standard charge	0°C ~ +45°C	65±20%
Standard discharge	-20°C ~ +65°C	65±20%

Parameters and specifications

Electronical parameters

Item		Standard requirement
Power requirements		: AC 100-240 V , 50/60 Hz
Power consumption		: <10W
Operating humidity		: 5 % to 90 %
Output	VIDEO OUT	:1Vp-p (75Ω)
	AUDIO OUT	:1.2 Vrms (1 KHz, 0 dB)

System

Laser	:Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	:More than 80 dB (ANALOG OUT connectors only)
Dynamic range	:More than 85 dB (DVD/CD)



Note:

Design and specifications are subject to change prior notice.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com

CE



Electric and electronic equipment and included batteries contains materials, environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Please fill the blank with the model number of this player for future reference

Importer:

DENVER ELECTRONICS A/S

Stavneagervej 22

DK-8250 EGAA

DENMARK

www.facebook.com/denverelectronics

components and substances that can be hazardous to your health and the